

# System Controller Battery Voltage Divider

$$V_{\text{Out}} = \left( \frac{R_2}{R_1 + R_2} \right) * V_{\text{In}}$$

